

Viavi MTS/T-BERD 5800v1 Software Update Instructions



September 27, 2017

Table of Contents

Scope..... 2

1. Network Upgrade 2

2. USB Upgrade 7

3. StrataSync..... 11


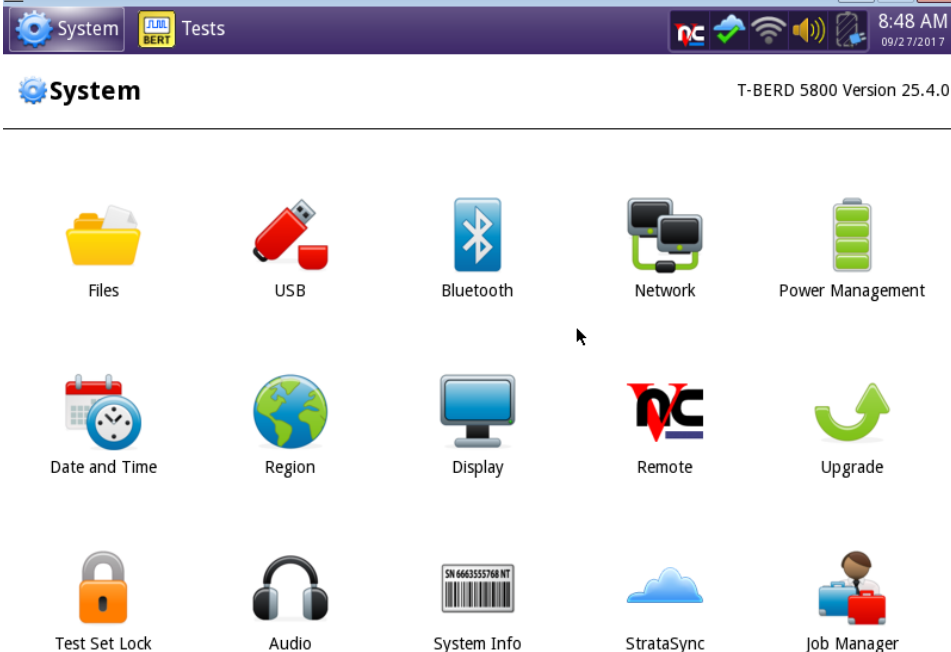
Scope

There are three methods to update T-BERD 5800v1 software:

1. Network upgrade - Use this method to update your T-BERD via an Internet connection.
2. USB upgrade - Use this method to update your T-BERD with a USB thumb drive.
3. StrataSync upgrade - Use this method if your T-BERD 5800v1 is managed using Viavi's StrataSync Asset Management system.

The T-BERD must be connected to AC Power, regardless of update method.


1. Network Upgrade


<i>Step</i>	<i>Action</i>	<i>Details</i>
1.	Power On	Press and hold the ON/OFF button o turn on the T-BERD 5800v1.
2.	AC Power	Connect the AC power adapter to the power connector on the top of the T-BERD 5800v1.
3.	LAN Connection	Connect the Ethernet Management Port on the side of T-BERD 5800v1 to a network connection with internet access, using CAT 5E or better cable.
4.	System	<p>Press the System icon, , at the top of the start-up screen, to display the</p> 


System Menu.



5. Network Settings


Press the Network icon,  , to display LAN Settings. Set **IP Mode** to “**DHCP**” for automatic IP address assignment or “**Static**” for manual input.

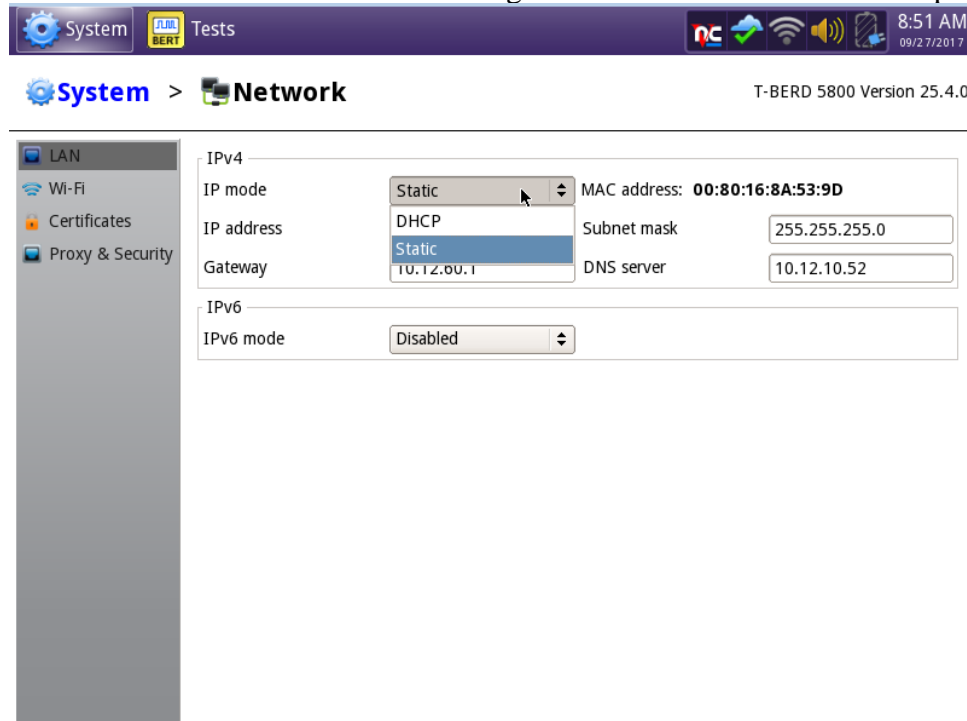


After configuring LAN settings, press the System icon,  , to redisplay the System Menu.





6. Upgrade

Press the Upgrade icon,  , to display upgrade methods.

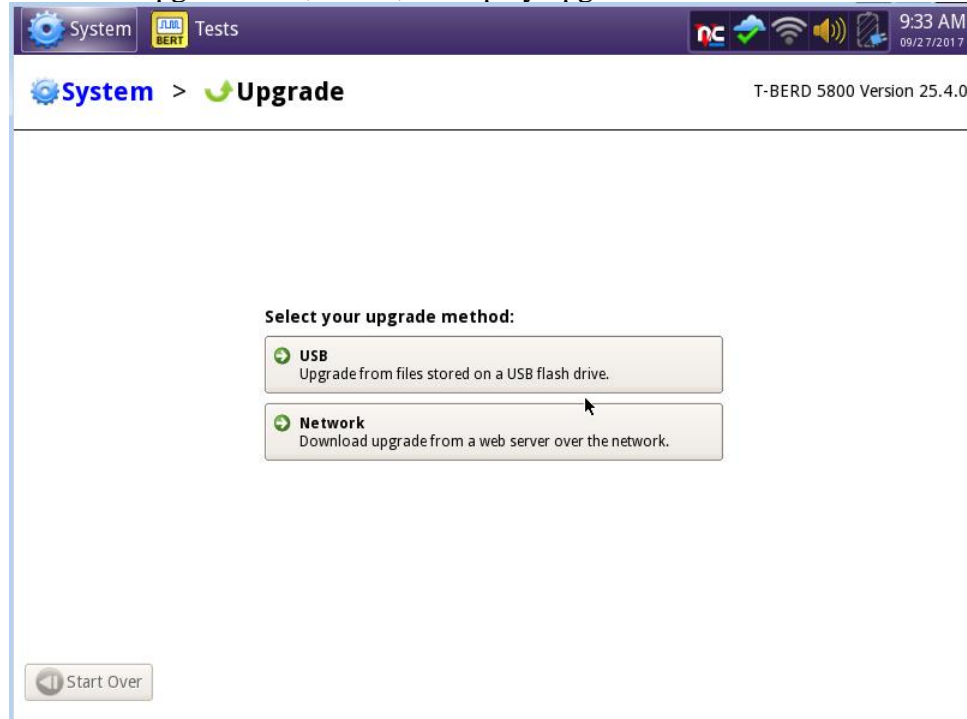

 
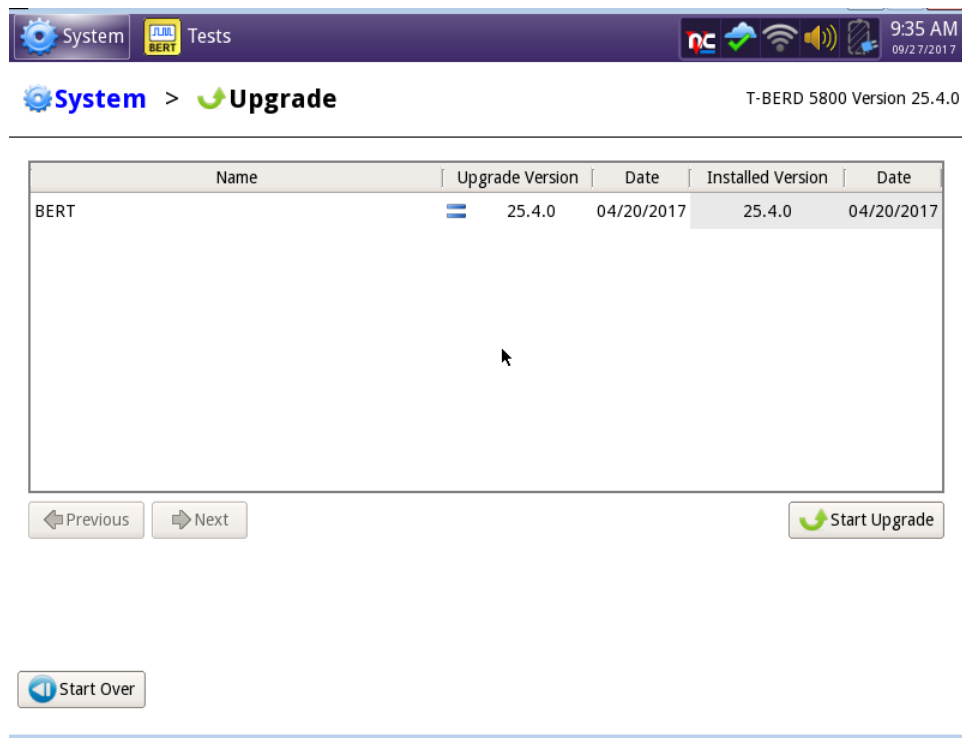
7. Network Upgrade

Press  to display upgrade settings. Ensure that **Server Address** = "5800.updatemyunit.net"

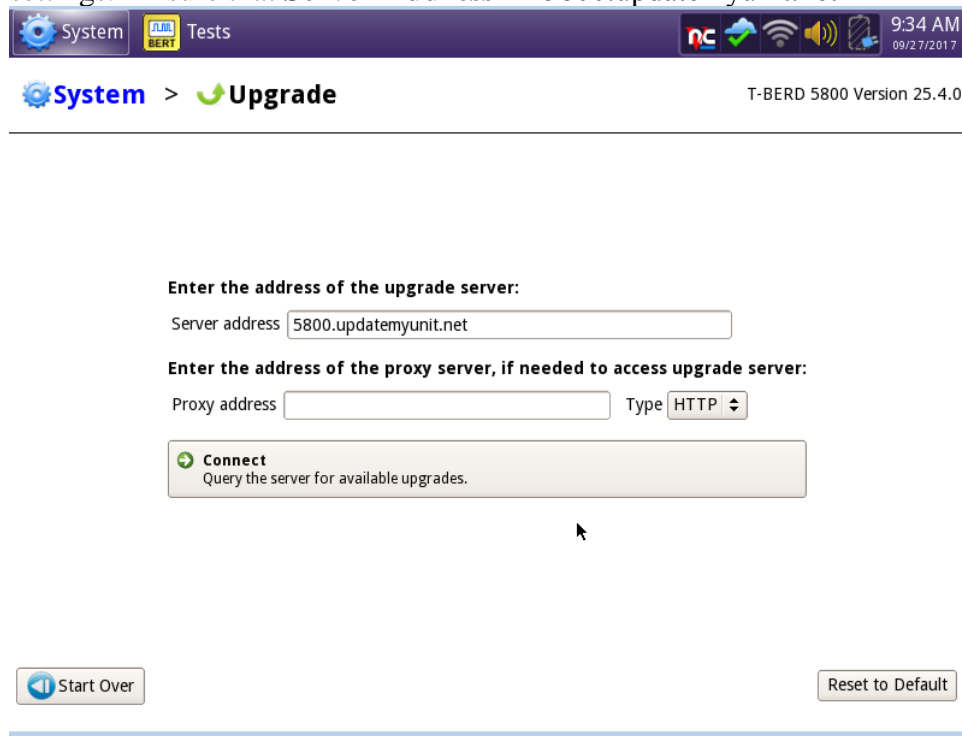

8. Connect

Press  to show the upgrade versions available at upgrademyunit.net.




9. Start Upgrade


Press , and press  to initiate the upgrade.


2. USB Upgrade

Step *Action* *Details*


1. Updatemyunit.net Using an internet browser on your PC or laptop, go to <http://updatemyunit.net/>

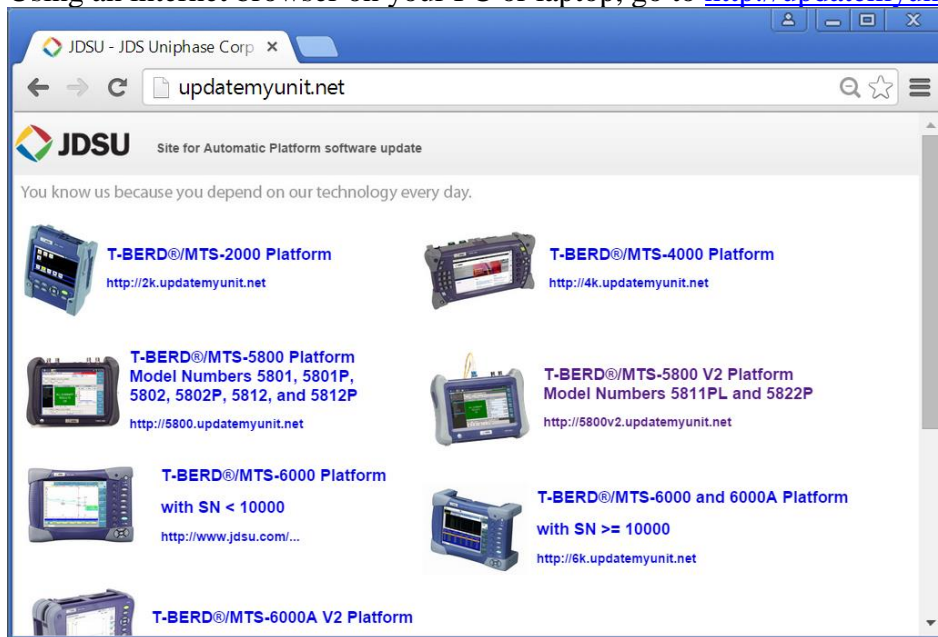


2. 5800v2 Click on the  to display the T-BERD 5800v1 upgrade portal.

3. Download Click on the US/Canadian Flag, , and click to download the current software revision from the North American download server. Save it to your desktop.

 
4. USB Stick Insert a USB thumb drive into the USB port on your PC or laptop.


5. Extract Open and run the downloaded file, enter the path of the USB stick, and press  to extract files.

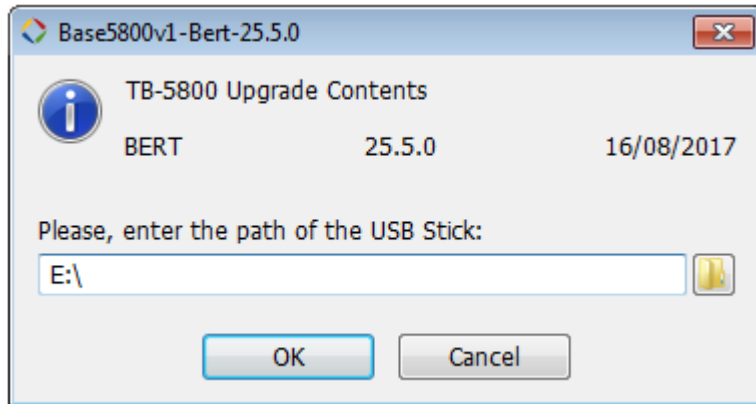


6. Eject Safely eject the USB drive from your PC or Laptop
7. Power on T-BERD Press and hold the ON/OFF button to turn on the T-BERD 5800v1.
8. AC Power Connect the AC power adapter to the power connector on the top of the T-BERD 5800v1.
9. USB Connect the USB Thumb Drive to one of the USB ports on the side of the T-BERD 5800v1. An 8GB or smaller drive is recommended.


10. System

Press the System icon, , at the top of the start-up screen, to display the System Menu.

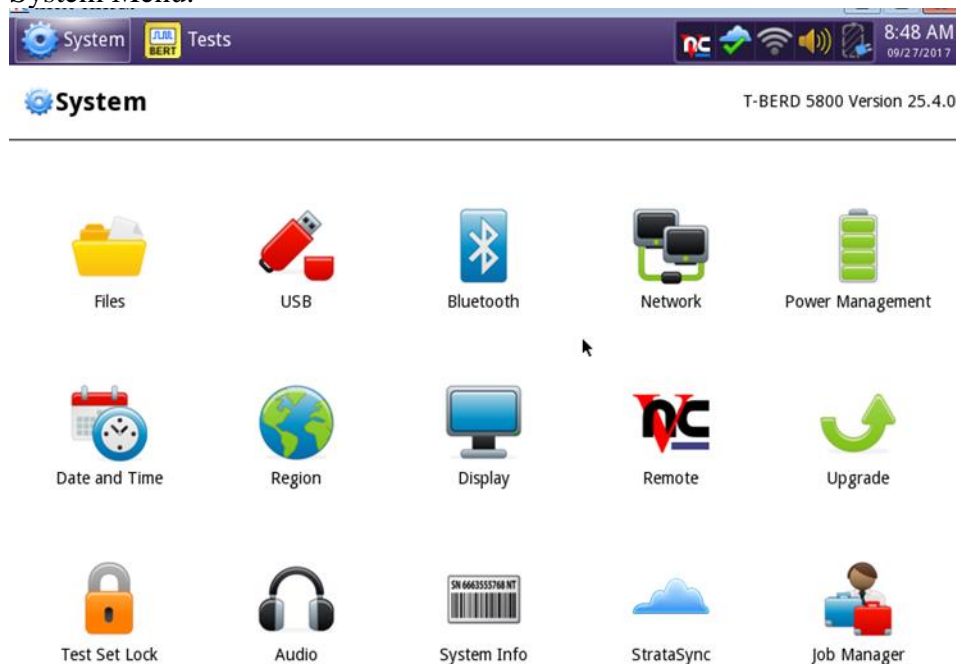



11. Upgrade

Press the Upgrade icon, , to display upgrade methods.

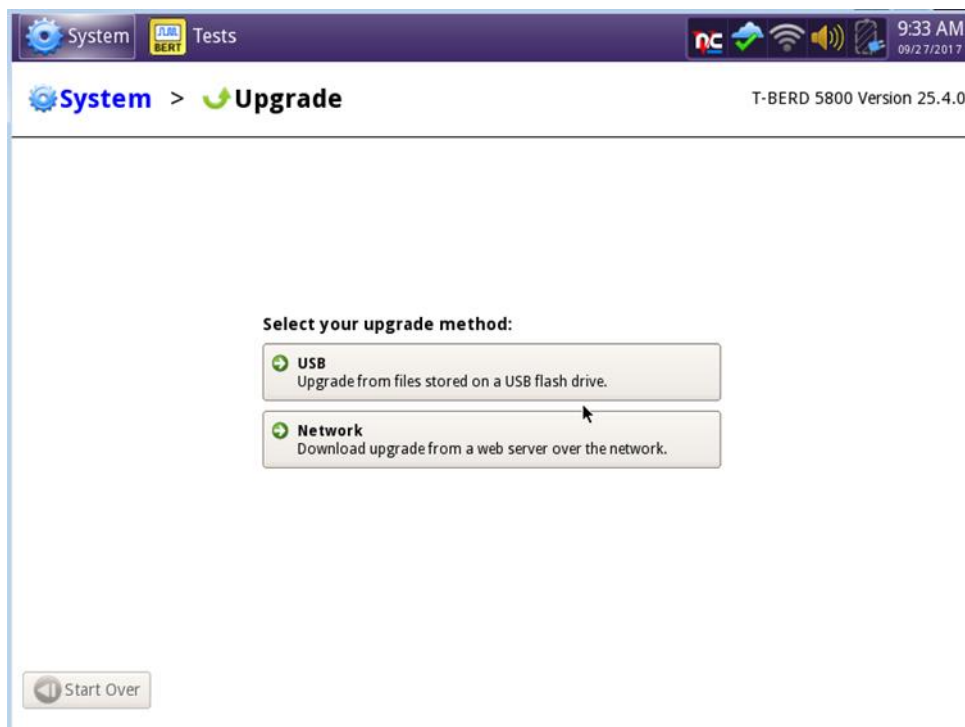

 12. USB Upgrade

Press  **USB**
Upgrade from files stored on a USB flash drive. to display upgrade versions available on the USB stick.

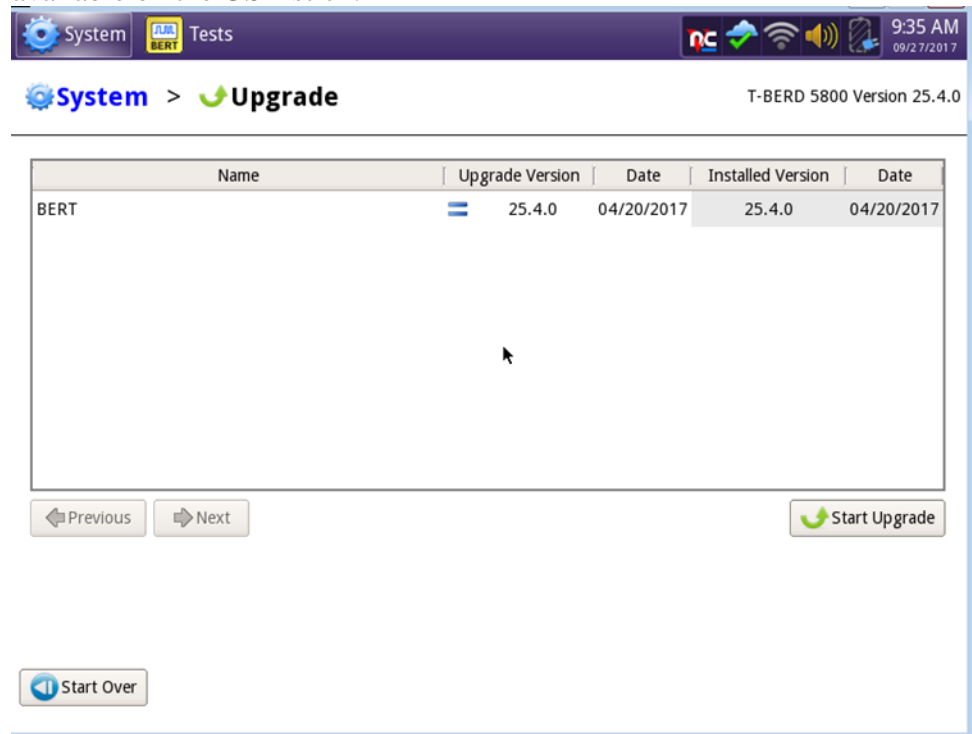

The screenshot shows the 'System > Upgrade' screen for a T-BERD 5800. The interface includes a top navigation bar with 'System' and 'Tests' options, and a status bar showing the time as 9:35 AM on 09/27/2017. The main content area displays a table with the following data:


Name	Upgrade Version	Date	Installed Version	Date
BERT	25.4.0	04/20/2017	25.4.0	04/20/2017


Below the table are navigation buttons: 'Previous', 'Next', and 'Start Upgrade'. At the bottom of the screen is a 'Start Over' button.

13. Start Upgrade

Press . Press  to initiate the upgrade.


3. StrataSync


<i>Step</i>	<i>Action</i>	<i>Details</i>
1.	Power On	Press and hold the ON/OFF button to turn on the T-BERD 5800v1.
2.	AC Power	Connect the AC power adapter to the power connector on the top of the T-BERD 5800v1.
3.	LAN Connection	Connect the Ethernet Management Port on the side of T-BERD 5800v1 to a network connection with internet access, using CAT 5E or better cable.
4.	System	Press the System icon,  , at the top of the start-up screen, to display the System Menu.

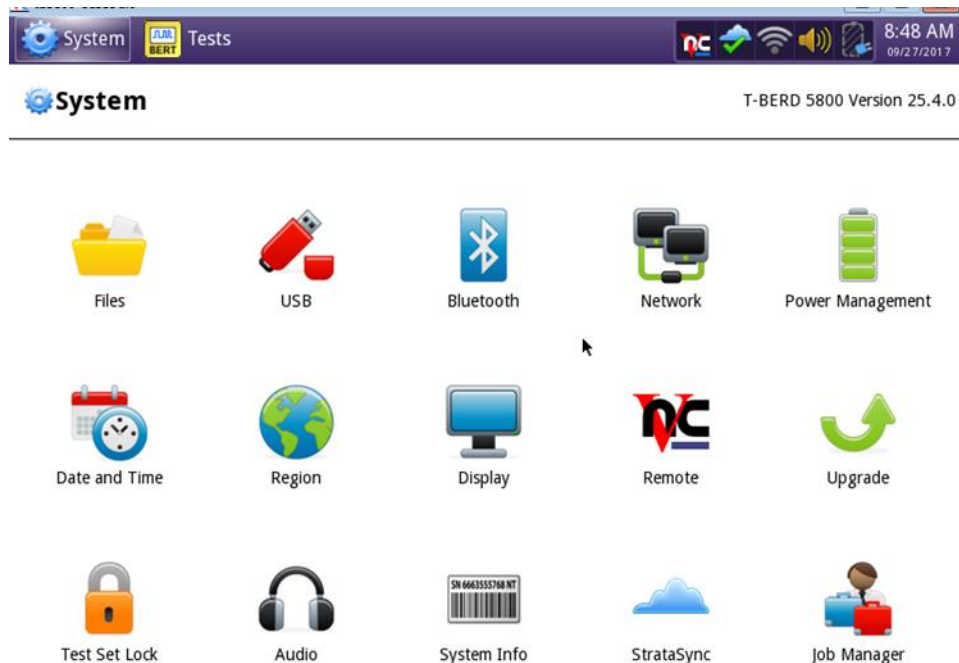


5. Network Settings




Press the Network icon,  , to display LAN Settings. Set **IP Mode** to “**DHCP**” for automatic IP address assignment or “**Static**” for manual input.

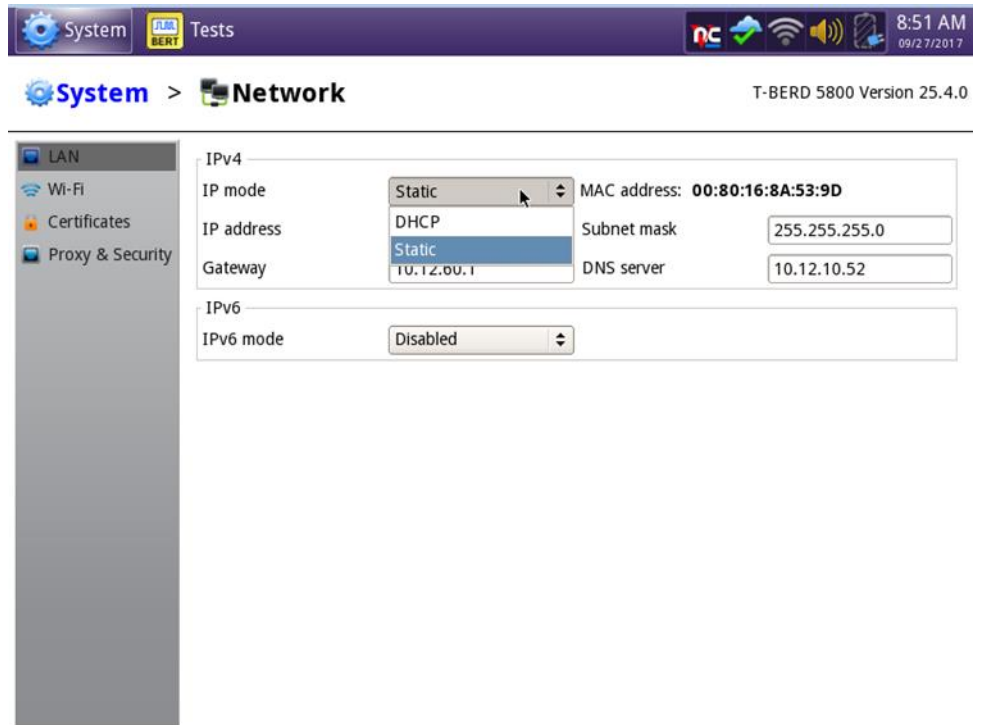


After configuring LAN settings, press the System icon, , to redisplay the System Menu.



 6. StrataSync

Press the StrataSync icon, , to display StrataSync Settings. Ensure that **Account ID** and **Technician ID** match those of your StrataSync account.

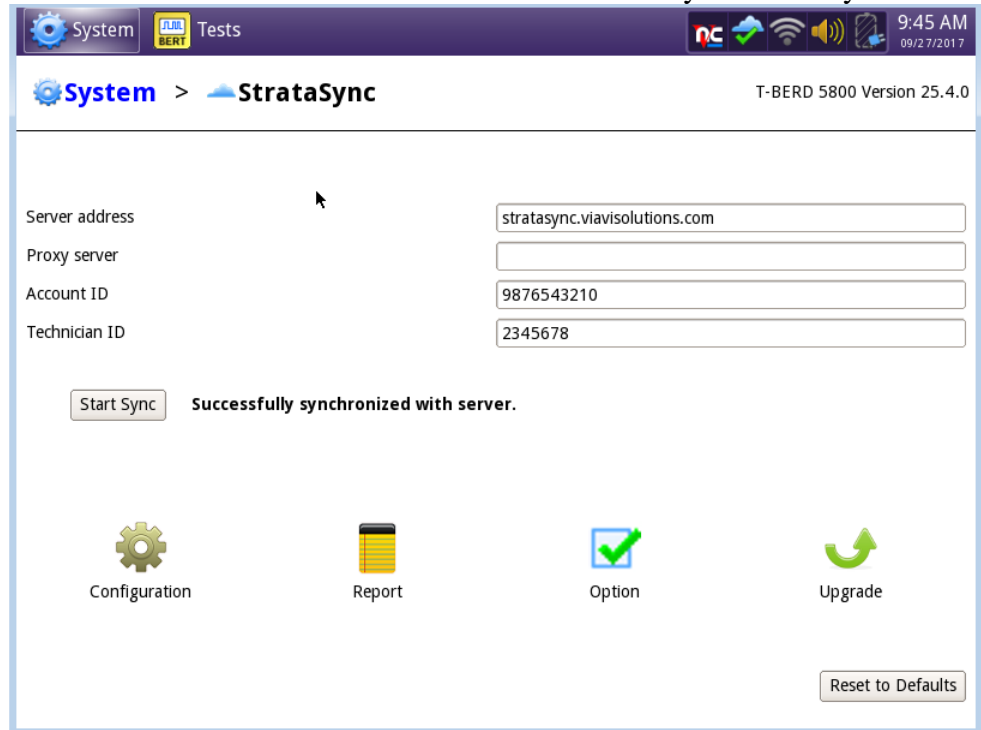

7. Sync

Press to sync your T-BERD 5800v1 and initiate upgrades authorized by your StrataSync System Administrator. If an upgrade has been assigned you will receive a message box telling you that an upgrade is available and prompting you to OK or Cancel. If you were expecting an upgrade notification and did not receive one during your sync to Stratasync, contact your company's Stratasync Admin.